

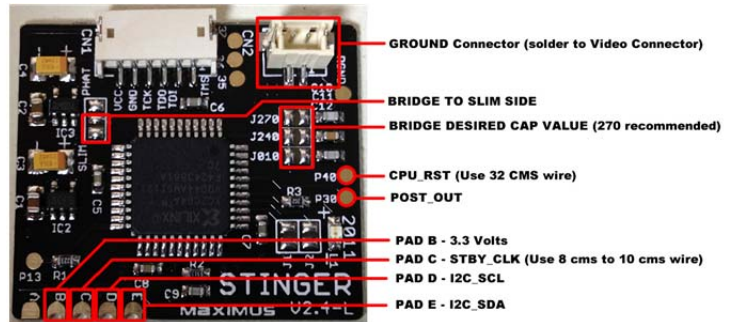


Slim Installation

TOP SIDE

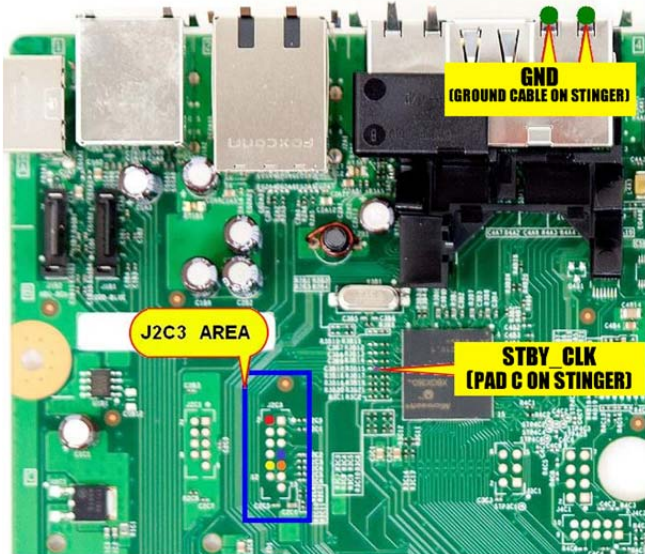

If Using the QSB, Solder pads B, C, D and E directly to QSB board and you only need to run Wires P30 and P40

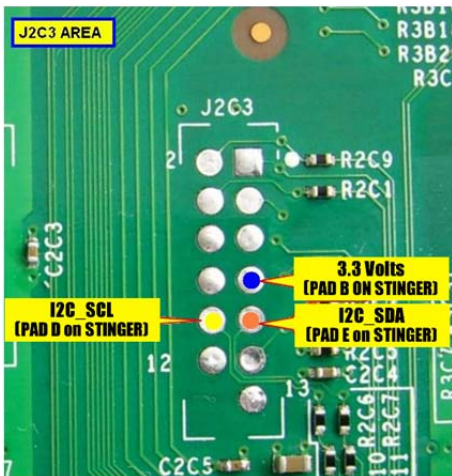

BOTTOM SIDE

